




SKYLINE Roller Blinds Installation Instructions

We recommend that all Jackson window coverings be professionally installed by a trained installer.


Step 1 (Optional valance) Assembling the Valance

Slide the corner into the inside slots of the valance end return and then slide this unit into the side slots of the valance face. Attach the top clip where the top of the return meets the top of the face. Wrap the fabric overlap around the corner and pinch it gently into the slots on the return. Inset the pegs on the corner caps into the holes in the corner.

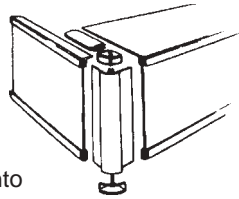

Step 2 Mounting the Valance Brackets Outside Mount with Valance


Place the assembled wall valance brackets with attached valance clips on the wall not more than 6" from each end. Place the remaining brackets equal distance apart. The valance can be mounted last.

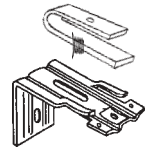

Wall Valance Bracket with attached Valance Clip

Inside Mount with Valance

 
Assemble the valance box as in step 1. Screw the valance clips into the frame not more than 6" in from either end. Do not install the valance until after the roller blind itself is up.



Valance Clip

Step 3 Mounting the Blind Brackets

Attach the brackets to the window frame, window molding, wall or ceiling. Brackets are universal so clutch may be mounted on either side.

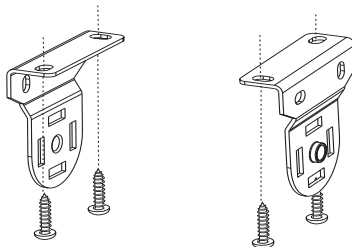


Step 4 Mounting the Blind

Put the spring loaded pin into the round hole of the bracket. Keeping the pin end secured in it's bracket, insert the hook arms on the clutch straight into the two hook arm receiver holes of the bracket. Once the two hook arms are through the holes, gently pull down on the clutch until the two hook arms have locked securely to the bracket. The bottom of the clutch should always point straight down.

After the blind is installed, test it by pulling on the chain. It is very important that the blind be raised and lowered by using the chain pull only. Pulling the blind fabric directly may damage the fabric and the clutch. To lower the blind, pull the back side of the chain down. To raise the blind, pull the front side of the chain down. Be careful not to overextend the blind.

Step 5 Adjusting the Length

Extend the blind down until the window is adequately covered. There should still be fabric around the roller. If there is metal showing, the blind is too short. There should be an extra bead chain connector placed on the chain to prevent the blind from being overextended. (This extra connector will hit the clutch). There is a chance that the blind may have unrolled or shifted slightly in shipping. If the blind does not roll down far enough to cover the window, roll it down as far as it will go then remove the blind from the brackets. Roll it the rest of the way by flipping the fabric over the roller by hand to reach the desired length. Be aware however that after adjustment, there should still be fabric completely covering the roller, if not, the blind is too short.

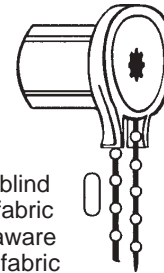

Cleaning Instructions

Clean the fabric of the blind with a damp cloth or mild detergent. Do not operate the roller blind other than by using the chain.

Please note that all roller blinds tend to curl at the edges. This is normal. The extent of the curling will depend on the material used, the amount of heat on the backside of the blind, and the size of the blind.

Many people choose to put side drapes over the blinds to conceal this situation.

Step 6 Attach the Safety Device

Screw the chain guide to the wall, allowing some slack so the control chain is still operable.



Step 7 Install the Valance

Slide the valance back into the valance clips, or into the wings on the wall valance bracket.

WARNING MIS EN GARDE

1-866-662-0666

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.

-- Always keep cords and bead chains out of children's reach.

--Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

--Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.

Un jeune enfant peut s'ÉTRANGLER avec la boucle d'un cordon ou d'une chaînette. Il peut aussi enrouler le cordon autour de son cou et s'ÉTRANGLER.

--Gardez toujours les cordons et les chaînettes hors de portée des enfants.

--Éloignez les lits et parcs de bébé, ainsi que toute autre pièce de mobilier, des cordons et des chaînettes. Un enfant peut grimper sur un meuble pour atteindre les cordons.

--Fixez au mur ou sur le plancher un dispositif gardant chaînettes ou le cordon bien tendu. On peut ainsi empêcher l'enfant de saisir le cordon ou la chaînette et de s'enrouler autour du cou.

For more information on blind cord safety, contact Health Canada toll free at 1-866-662-0666, or visit their website at:

www.healthcanada.gc.ca/blindcords

www.santecanada.gc.ca/cordons-stores



SKYLINE Roller Blinds

with Fascia

Installation Instructions

We recommend that all Jackson window coverings be professionally installed by a trained installer.

The mounting brackets for the fascia system houses both the roller blind and the fascia panel. The same bracket is used for both the control end and the pin end of the blind as well as for inside mount and wall mount.


Step 1 - Mounting the Blind Brackets

The open end of each bracket faces downward.

3" FASCIA

Insert the chain diverter into the clutch side mounting bracket only.

Place the chain diverter on the brackets lower arms and rotate backwards into the bracket. Make sure the two round pins on the chain diverter "click" into the two matching round holes on the bracket. Failure to make sure the diverter clicks in position may allow the diverter to fall out later. Once the diverter is attached, screw the brackets either back into the wall or up into the frame in their correct positions at the ends of the blind.

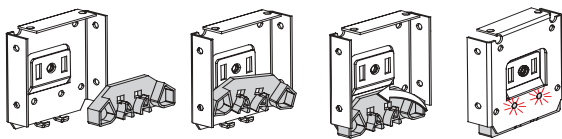


4" FASCIA

Skyline 4-inch Brackets include slotted mounting holes, allowing pre-marking and attaching of the mounting screws without the bracket needing to be in place. **PLEASE NOTE: A chain diverter is not required with a 4-inch fascia bracket.**

- 1- Hold the mounting bracket in position in the window and mark the location where the screws should be positioned.
- 2- Partially screw in both screws where marked.
- 3- Slip the mounting bracket over the two screws and slide the bracket sideways until the screws heads capture the bracket.
- 4- Tighten the screws all the way.
- 5- Install additional screws in the additional two holes or as required.


Step 2 Mounting the Blind

Push the clutch straight onto the blade of its bracket. The bottom of the clutch should always point straight down. Lower the lug of the end plug onto the "V" of its bracket. The roller should fit in the brackets securely, with just a little play.

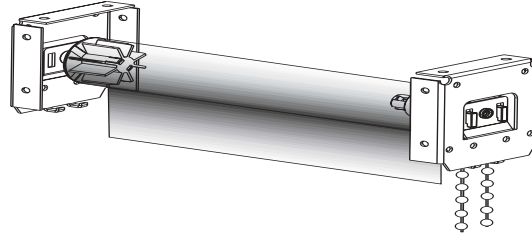


Step 3: Adjusting the Length

Extend the blind down until the window is adequately covered. There should still be fabric around the roller. If there is metal showing, the blind is too short. There should be an extra bead chain connector placed on the chain to prevent the blind from being overextended. (This extra connector will hit the clutch). There is a chance that the blind may have unrolled or shifted slightly in shipping. If the blind does not roll down far enough to cover the window, roll it down as far as it will go then remove the blind from the brackets. Roll it the rest of the way by flipping the fabric over the roller by hand to reach the desired length. Be aware however that after adjustment, there should still be fabric completely covering the roller, if not, the blind is too short.

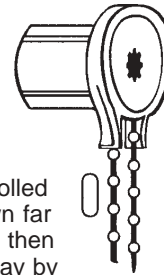


Step 4 Mounting the Fascia

Hook the fascia on the top of bracket first, and rotate downward and press until the hooked feature on the fascia engages and is locked to the bracket.

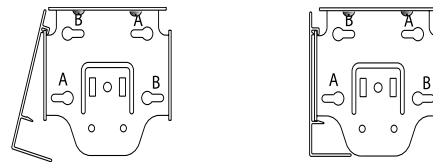

Step 5 Attach the Safety Device.

 Make sure that the chain guide is on the control chain. Screw the chain guide to the wall, allowing some slack so the control chain is still operable.



Cleaning Instructions

Clean the fabric of the blind with a damp cloth or mild detergent.

Do not operate the roller blind other than by using the chain.

Please note that all roller blinds tend to curl at the edges. This is normal. The extent of the curling will depend on the material used, the amount of heat on the backside of the blind, and the size of the blind.

Many people choose to put side drapes over the blinds to conceal this situation.

Warranty

All Jackson Chain Operated Roller Blinds are warranted to give satisfactory service under normal use conditions for three (3) years from the date of purchase. During this time Jackson will repair or replace without charge any part of the blind which is defective in materials or workmanship.

This warranty does not cover normal curling, soiling, scratching, or fading from use.

These warranties do not cover defects which result from misuse or failure to follow the use and care instructions provided at the time of purchase. These warranties do not cover claims for incidental or consequential damages. Installation costs are not covered.



WARNING MIS EN GARDE

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.

-- Always keep cords and bead chains out of children's reach.

--Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

--Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.

Un jeune enfant peut s'ÉTRANGLER avec la boucle d'un cordon ou d'une chaînette. Il peut aussi enrouler le cordon autour de son cou et s'ÉTRANGLER.

--Gardez toujours les cordons et les chaînettes hors de portée des enfants.

--Éloignez les lits et parcs de bébé, ainsi que toute autre pièce de mobilier, des cordons et des chaînettes. Un enfant peut grimper sur un meuble pour atteindre les cordons.

--Fixez au mur ou sur le plancher un dispositif gardant chaînettes ou le cordon bien tendu. On peut ainsi empêcher l'enfant de saisir le cordon ou la chaînette et de s'enrouler autour du cou.

For more information on blind cord safety, contact Health Canada toll free at 1-866-662-0666, or visit their website at:

www.healthcanada.gc.ca/blindcords

www.santecanada.gc.ca/cordons-stores